

ATTREQ System Variables — GstarCAD 2027

4978 kbadmin September 25, 2026 [Command Reference](#) 0 8

ATTREQ System Variables

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ATTREQ system variable is used to control whether to use default attribute settings when inserting blocks by INSERT command.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** use their respective default value for all attributes
- 1:** according to settings of ATTDIA system variable, to get attribute values by command prompts or dialog box

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4978>