

AUTODWFPUBLISH System Variables — GstarCAD 2027

4982 kbadmin September 25, 2026 [Command Reference](#) 0 9

AUTODWFPUBLISH System Variables

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The AUTODWFPUBLISH system variable is used to control whether to create a DWF file automatically when saving or closing a DWG file.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** turn off automatic publishing to DWF files when saving or closing a DWG file
- 1:** turn on automatic publishing to DWF files when saving or closing a DWG file

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4982>