

AUTOSNAP System Variable — GstarCAD 2027

AUTOSNAP System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The AUTOSNAP system variable is used to control the display of the Autosnap marker, tooltip, and magnet.

Type	Integer
Saved in	Registry
Initial value	63
Range	0,1,2,4,8,16,32

System Variable Value:

- 0:** turn off auto snap marker, tooltip, and magnet. Turn off polar tracking, object snap tracking, and tooltips for polar tracking, object snap tracking, and ortho mode
- 1:** turn on auto snap marker
- 2:** turn on auto snap tooltips
- 4:** turn on auto snap magnet
- 8:** turn on polar tracking
- 16:** turn on object snap tracking
- 32:** turn on tooltips for polar tracking, object snap tracking, and ortho mode

Users can turn on polar tracking and object tracking, they can also control the display of tooltips for polar tracking, object snap tracking, and ortho mode.
The system variable is stored as a bitcode by using the sum of above values.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4983>