

BACTIONBARMODE System Variable — GstarCAD 2027

5046 kbadmin September 25, 2026 [Command Reference](#) 0 10

BACTIONBARMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The BACTIONBARMODE system variable is used to control whether to display action bar or traditional action objects in block editor.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** display traditional action objects in block editor
 - 1:** display action bar in block editor
- Note:** when the BACTIONBARMODE system variable has set to be 1, the BACTIONSET, BASSOCIATE, and BLOOKUPTABLE commands are disabled.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)