

BGRIPOBJSIZE System Variable — GstarCAD 2027

5051 kbadmin September 25, 2026 [Command Reference](#) 0 7

BGRIPOBJSIZE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The BGRIPOBJSIZE system variable is used to set displaying size of customized grip relative to screen in block editor.

Type	Integer
Saved in	Registry
Initial value	8
Range	1 ~ 255

The valid value is an integer between 1 and 255.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5051>