

# BLIPMODE System Variable — GstarCAD 2027

5054 kbadmin September 25, 2026 [Command Reference](#) 0 12

## BLIPMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The BLIPMODE system variable is used to control the visibility of marker blips.

|               |          |
|---------------|----------|
| Type          | Integer  |
| Saved in      | Registry |
| Initial value | 0        |
| Range         | 0,1      |

### System Variable Value:

**0:** turn off marker blips

**1:** lturn on marker blips

This system variable has the same name as the BLIPMODE command.

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5054>