

CANNOSCALEVALUE System Variable — GstarCAD 2027

5077 kbadmin September 25, 2026 [Command Reference](#) 0 18

CANNOSCALEVALUE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CANNOSCALEVALUE system variable is used to display the current annotative scale.
(Read-Only)

Type	Real
Saved in	Drawing
Initial value	1.0000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5077>