

CBKWID — GstarCAD 2027

5088 kbadmin September 25, 2026 [Command Reference](#) 0 22

CBKWID

[GstarCAD 2027](#) · [Command Reference](#)

This function is used to set break width for Cross objects.

Operation steps:

1.Start the command.

2.Enter the width of the break space.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5088>