

CETRANSPARENCY System Variable — GstarCAD 2027

5096 kbadmin September 25, 2026 [Command Reference](#) 0 20

CETRANSPARENCY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CETRANSPARENCY system variable is used to set the transparency level for new objects.

Type	Strings
Saved in	Drawing
Initial value	BYLAYER
Range	BYLAYER, BYBLOCK, 0, 1 ~ 90

Users can change transparency states by "Properties" palettes or "Layer Property Manager".
Note: limit the transparency to be 90% to avoid confusion of layer closed or frozen.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5096>