

CHAMMODE System Variable — GstarCAD 2027

CHAMMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CHAMMODE system variable is used to set the entry methods for CHAMFER.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:** need two chamfer distances
- 1:**need one chafer distance and one angle

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)