

CLEANSCREENSTATE System Variable — GstarCAD 2027

5105 kbadmin September 25, 2026 [Command Reference](#) 0 24

CLEANSCREENSTATE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CLEANSCREENSTATE system variable is used to specify the full screen state to be turned on or off.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

0: turn off **1:** turn on

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5105>