

CMATERIAL System Variable — GstarCAD 2027

5107 kbadmin September 25, 2026 [Command Reference](#) 0 15

CMATERIAL System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CMATERIAL system variable is used to set material for new objects.

Type	Strings
Saved in	Drawing
Initial value	BYLAYER

The valid value can be BYLAYER, BYBLOCK, and material names in drawing.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5107>