

# CMDACTIVE

[GstarCAD 2027](#) · [Command Reference](#)

## Function Description:

The CMDACTIVE system variable is used to specify which one is active, common commands, transparency command, script or dialog box.  
(Read-Only)

|               |                    |
|---------------|--------------------|
| Type          | Integer            |
| Saved in      | Not saved          |
| Initial value | Unknown            |
| Range         | 0,1,2,4,8,16,32,64 |

The setting is stored as a bitcode using the sum of listed system variable values.

## System Variable Value:

- 0:** no active command
- 1:** common command active
- 2:** transparency command active
- 4:** script active
- 8:** dialog box active
- 16:** DDE active
- 32:** AutoLISP active (Only for commands defined by ObjectARX)
- 64:** ObjectARX commands active drawing

## Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5108>