

CMDDIA System Variable — GstarCAD 2027

5109 kbadmin September 25, 2026 [Command Reference](#) 0 13

CMDDIA System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CMDDIA system variable is used to the display of in-place editor when executing LEADER and QLEADER commands.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** turn off
- 1:** turn on

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)