

CMDNAMES System Variable — GstarCAD 2027

5112 kbadmin September 25, 2026 [Command Reference](#) 0 8

CMDNAMES System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CMDNAMES system variable is used to display the names of active command and transparency commands.
(Read-Only)

Type	String
Saved in	Not saved
Initial value	""

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5112>