

CMLEADERSTYLE System Variable — GstarCAD 2027

5113 kbadmin September 25, 2026 [Command Reference](#) 0 9

CMLEADERSTYLE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CMLEADERSTYLE system variable is used to set the name of current mleader style.

Type	Strings
Saved in	Drawing
Initial value	Standard

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5113>