

# CMLJUST System Variable — GstarCAD 2027

5114 kbadmin September 25, 2026 [Command Reference](#) 0 8

## CMLJUST System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The CMLJUST system variable is used to specify alignment for multiple line.

|               |         |
|---------------|---------|
| Type          | Integer |
| Saved in      | Drawing |
| Initial value | 0       |
| Range         | 0,1,2   |

### System Variable Value:

- 0: top
- 1: zero(middle)
- 2: bottom

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5114>