

CMLSCALE System Variable — GstarCAD 2027

5115 kbadmin September 25, 2026 [Command Reference](#) 0 18

CMLSCALE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CMLSCALE system variable is used to control global line weight for multiple line.

Type	Integer
Saved in	Drawing
Initial value	1.0000(Imperial) or 20.0000 (Metric)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5115>