

CONSTRAINTINFER System Variable — GstarCAD 2027

5120 kbadmin September 25, 2026 [Command Reference](#) 0 3

CONSTRAINTINFER System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CONSTRAINTINFER system variable is used to control whether to infer geometric constrains when drawing or editing geometric drawings.

Type	Bitcode
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0: do not to infer geometric constrains
- 1: infer geometric constrains

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5120>