

COPYMODE System Variable — GstarCAD 2027

5125 kbadmin September 25, 2026 [Command Reference](#) 0 20

COPYMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The COPYMODE system variable is used to control whether to repeat COPY command automatically.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** set to repeat COPY command automatically
- 1:** set to create a single copy by COPY command

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5125>