

CTAB System Variable — GstarCAD 2027

5130 kbadmin September 25, 2026 [Command Reference](#) 0 8

CTAB System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CTAB system variable is used to control to display model tab or specified layout tab in drawing area.

Type	Strings
Saved in	Drawing
Initial value	Model

The CTAB system variable is usually used in customized programs.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5130>