

CURSORSIZE System Variable — GstarCAD 2027

5134 kbadmin September 25, 2026 [Command Reference](#) 0 21

CURSORSIZE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The CURSORSIZE system variable is used to determine the cursor size by degrees of screen.

Type	Integer
Saved in	Registry
Initial value	5
Range	1% ~100%

The valid range is from 1% to 100%. When setting to 100%, the cursor displays in full screen, users can not see the endpoint of cursor. When setting to smaller than 100%, moving the cursor to the edge of screen, users can see the endpoint of cursor.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5134>