

Change Block Linewidth — GstarCAD 2027

5139 kbadmin September 25, 2026 [Command Reference](#) 0 10

Change Block Linewidth

[GstarCAD 2027](#) · [Command Reference](#)

The bChgWid function can modify block linewidth quickly.

Operation Steps:

- 1.Start the command.
- 2.Input a new line width value.
- 3.Select block objects, for which the line widths need to be changed.
- 4.Finish changing the line width.

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5139>