

# Change Dimension Text — GstarCAD 2027

5143 kbadmin September 25, 2026 [Command Reference](#) 0 10

## Change Dimension Text

[GstarCAD 2027](#) · [Command Reference](#)

The CHGDIMTXT command is used to change the dimension content into the specified value

Command line prompts as follows:

Select dimension objects:

Currently label content, input new dimension text <practically measure dimension>:

## Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5143>