

DEFAULTLIGHTINGTYPE System Variable — GstarCAD 2027

5309 kbadmin September 25, 2026 [Command Reference](#) 0 7

DEFAULTLIGHTINGTYPE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DEFAULTLIGHTINGTYPE system variable is used to specify whether to use the old default lighting type or the new type.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0: Uses the old type of the default lighting.
- 1: Uses the new type of the default lighting.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5309>