

DGNOSNAP System Variable — GstarCAD 2027

5317 kbadmin September 25, 2026 [Command Reference](#) 0 13

DGNOSNAP System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DGNOSNAP system variable is used to determine whether to active object snap mode for geometric drawings that attached DGN reference underlay.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** turn off object snap mode for geometric drawings that attached DGN reference underlay
- 1:** turn on object snap mode for geometric drawings that attached DGN reference underlay

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5317>