

DIASTAT System Variable — GstarCAD 2027

5318 kbadmin September 25, 2026 [Command Reference](#) 0 17

DIASTAT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIASTAT system variable is used to save the exiting way for currently used dialog box.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

0: cacle

1: ok

Note: the DIASTAT system variable will not be applied on standard file selection dialog box (such as "Select file" and "Save as")

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)