

DIMALT System Variable — GstarCAD 2027

5320 kbadmin September 25, 2026 [Command Reference](#) 0 16

DIMALT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMALT system variable is used to control the display of alternate units in dimensions.

Type	Parameter
Saved in	Drawing
Initial value	Turn off

System Variable Value:

- Off:** disable alternate units
- On:** enable alternate units

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5320>