

DIMALTD System Variable — GstarCAD 2027

5321 kbadmin September 25, 2026 [Command Reference](#) 0 8

DIMALTD System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMALTD system variable is used to control the number of decimal places in alternate units.

Type	Integer
Saved in	Drawing
Initial value	2 (Imperial)or 3 (Metric)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5321>