

DIMAPOST System Variable — GstarCAD 2027

5329 kbadmin September 25, 2026 [Command Reference](#) 0 7

DIMAPOST System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMAPOST system variable is used to specify the text prefixes and suffixes of alternate units dimensions for all dimensions (except angular dimensions).

Type	Strings
Saved in	Drawing
Initial value	""

Users can set the DIMAPOST system variable to be a Period "." to turn off a set prefix or suffix (or both).

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5329>