

DIMARCSYM System Variable — GstarCAD 2027

5330 kbadmin September 25, 2026 [Command Reference](#) 0 7

DIMARCSYM System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMARCSYM system variable is used to control the display of arc symbol in arc length dimension.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1,2

System Variable Value:

- 0:** put the arc symbol in front of dimension text
- 1:** put the arc symbol above dimension text
- 2:** do not display arc symbol

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5330>