

DIMASZ System Variable — GstarCAD 2027

5332 kbadmin September 25, 2026 [Command Reference](#) 0 9

DIMASZ System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMASZ system variable is used to control size of dimension line and leader arrow. It also controls size of baseline.

Type	Real
Saved in	Drawing
Initial value	0.1800(Imperial) or 2.5000 (Metric)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5332>