

DIMAUNIT System Variable — GstarCAD 2027

5334 kbadmin September 25, 2026 [Command Reference](#) 0 7

DIMAUNIT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMAUNIT system variable is used to set unit format for angular dimension.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 4

System Variable Value:

- 0:** decimal degrees
- 1:** degrees/minutes /seconds
- 2:** gradians
- 4:** radians

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5334>