

DIMBLK System Variable — GstarCAD 2027

DIMBLK System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMBLK system variable is used to set the display of arrow block on the end extension line.

Type	Strings
Saved in	Drawing
Initial value	""

Users can enter a Period "." to restore default settings.
Note: the annotative block can not be used as customized arrow for dimensions and leaders.

System Variable Value:

- "" : closed filled
- "_DOT": dot
- "_DOTSMALL": dot small
- "_DOTBLAN": dot blank
- "_ORIGIN": origin indicator
- "_ORIGIN2": origin indicator 2
- "_OPEN": open
- "_OPEN90": right angle
- _OPEN30": open 30
- "_CLOSED": closed
- "_SMALL": dot small blank
- "_NONE": none

"_OBLIQUE": oblique
"_BOXFILLED": box filled
"_BOXLANK": box
"_CLOSEDBLANK": closed blank
"_DATUMFILLED": datum triangle filled
"_DATUMBLANK": datum triangle
"_INTEGRAL": integral
"_ARCHICK": architectural tick

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5336>