

DIMBLK1 System Variable — GstarCAD 2027

5337 kbadmin September 25, 2026 [Command Reference](#) 0 9

DIMBLK1 System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMBLK1 system variable is used to set arrowhead for the first end of extension line when the DIMSAH is on.

Type	Strings
Saved in	Drawing
Initial value	""

Users can enter a Period "." to restore default settings.
Note: the annotative block can not be used as customized arrow for dimensions and leaders.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5337>