

DIMCLRD System Variable — GstarCAD 2027

5340 kbadmin September 26, 2026 [Command Reference](#) 0 7

DIMCLRD System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMCLRD system variable is used to specify color for extension lines, arrowheads and dimension lines.

Type	Integer
Saved in	Drawing
Initial value	0

It can also controls the leader color created by LEADER command. In "Select Color" dialog box, input "0" to select "BYBLOCK"; input "256" to select "BYLAYER".

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5340>