

DIMDEC System Variable — GstarCAD 2027

5344 kbadmin September 26, 2026 [Command Reference](#) 0 9

DIMDEC System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMDEC system variable is used to set the number of decimal places in main units for dimensions.

Type	Integer
Saved in	Drawing
Initial value	4 (Imperial) or 2 (Metric)

The precious is based on selected units or angle formats. The specified value will be applied on angular dimension when the DIMDEC system variable set to be -1.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5344>