

DIMFIT — GstarCAD 2027

DIMFIT

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMFIT system variable is used to position the text and arrow in or out the extension line.

Type	Real
Saved in	Drawing
Initial value	3
Range	0 ~ 5

System Variable Value:

- 0:** position the text and arrow in the extension line;
- 1:** position the text in the extension line and arrow out the extension line;
- 2:** position the text or arrow in the extension line;
- 3:** position the text and arrow in an optimal style;
- 4:** draw a leader if necessary;
- 5:** don't draw leader.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

