

DIMFXL System Variable — GstarCAD 2027

5352 kbadmin September 26, 2026 [Command Reference](#) 0 19

DIMFXL System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMFXL system variable is used to set the dimension line total length from dimension line to dimension origin.

Type	Real
Saved in	Drawing
Initial value	1.0000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5352>