

DIMFXLON System Variable — GstarCAD 2027

5353 kbadmin September 26, 2026 [Command Reference](#) 0 10

DIMFXLON System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMFXLON system variable is used to control whether to set a constant value for extension line.

Type	Parameter
Saved in	Drawing
Initial value	off

When DIMFXLON is on, the length of extension line is specified by DIMFXL system variable.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5353>