

DIMGAP System Variable — GstarCAD 2027

5354 kbadmin September 26, 2026 [Command Reference](#) 0 10

DIMGAP System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMGAP system variable is used to set the distance around the dimension text when the dimension line breaks to accommodate dimension text.

Type	Real
Saved in	Drawing
Initial value	0.0900(Imperial) or 0.6250 (Metric)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5354>