

DIMJOGANG System Variable — GstarCAD 2027

5355 kbadmin September 26, 2026 [Command Reference](#) 0 16

DIMJOGANG System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMJOGANG system variable is used to specify the angle of dimension line transverse part in jogged radius dimension.

Type	Real
Saved in	Drawing
Initial value	45
Range	5 ~ 90

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5355>