

DIMJUST System Variable — GstarCAD 2027

5356 kbadmin September 26, 2026 [Command Reference](#) 0 10

DIMJUST System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMJUST system variable is used to control the horizontal location of dimension text.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 4

System Variable Value:

- 0: place text above dimension line, and center- justify between extension lines
- 1: place dimension text next to the first extension line
- 2: place dimension text next to the second extension line
- 3: place dimension text above the first extension line and align them
- 4: place dimension text above the second extension line and align them

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5356>