

DIMLAYER System Variable — GstarCAD 2027

5357 kbadmin September 26, 2026 [Command Reference](#) 0 16

DIMLAYER System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMLAYER system variable is used to specify a default layer for new dimensions, the new dimensions are created on that layer automatically instead of creating dimensions on the current layer.

Type	String
Saved in	Drawing
Initial value	Use current

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5357>