

DIMLDRBLK System Variable — GstarCAD 2027

5358 kbadmin September 26, 2026 [Command Reference](#) 0 10

DIMLDRBLK System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMLDRBLK system variable is used to specify arrowhead type for leaders.

Type	Strings
Saved in	Drawing
Initial value	""

Input a Period "." to restore the default settings(closed- filled arrowhead).
Note: the annotative block can not be used as custom arrowhead for dimension or leader.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5358>