

DIMLWE System Variable — GstarCAD 2027

5366 kbadmin September 26, 2026 [Command Reference](#) 0 6

DIMLWE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMLWE system variable is used to specify lineweight for extension line.

Type	Enum
Saved in	Drawing
Initial value	-2
Range	0,5,9,13,15,18,20,25,30,35,40,50,53,60,70,80,90,100,106,120,140,158,200,211

System Variable Value:

- 3: default(the default value is controlled by LWDEAULT system variable)
- 2: byblock
- 1: bylayer

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5366>