

DIMPOST System Variable — GstarCAD 2027

5367 kbadmin September 26, 2026 [Command Reference](#) 0 5

DIMPOST System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMPOST system variable is used to specify the text prefixes or suffixed (or both) for dimension measurement.

Type	Strings
Saved in	Drawing
Initial value	None

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5367>