

DIMSE1 System Variable — GstarCAD 2027

5373 kbadmin September 26, 2026 [Command Reference](#) 0 16

DIMSE1 System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMSE1 system variable is used to control whether to hide the first extension line.

Type	Parameter
Saved in	Drawing
Initial value	Off

System Variable Value:

Off: display the extension line

On: hide the extension line

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5373>