

DIMSHO System Variable — GstarCAD 2027

5375 kbadmin September 26, 2026 [Command Reference](#) 0 10

DIMSHO System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMSHO system variable is used to control the update of dimension distance when enlarging or shortening dimension objects.

Type	Switch
Saved in	Drawing
Initial value	1
Range	0,1

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5375>