

DIMSTYLE System Variable — GstarCAD 2027

5377 kbadmin September 26, 2026 [Command Reference](#) 0 6

DIMSTYLE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The DIMSTYLE system variable is used to display the unit type for dimension in the drawing, such as Imperial/Standard or iso-25/Metric.

Type	Strings
Saved in	Drawing
Initial value	Stand(Imperial) or ISO-25 (Metric)

The name of system variable and command are the same. Users can use SETVAR command to access this system variable.
The DIMSTYLE system variable is read only. Users can change current dimension style by DIMSTYLE command.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5377>